

User Manual

LinkStation Pro

Shared Network Storage



Congratulations on your new LinkStation Pro! This user manual is intended to assist you in configuring it.

Because we're constantly updating our product, the images and text in this manual may vary slightly from the images and text displayed by your LinkStation. These changes are minor and should not affect the ease of setup adversely. As time passes, future user interfaces, updated software, and later versions of this manual may be freely available for download at our web site: <http://www.buffalotech.com>.

If you run into difficulties or need additional help, feel free to contact our 24/7 Technical Support at (866) 752-6210 (USA & Canada only). Technical Support in Europe is available between the hours of 9am - 6pm (GMT) Monday through Thursday and 9am-4:30 pm (GMT) Friday for this product. Customers in Europe can obtain Technical Support using the following information: Email: helpdesk@buffalo-technology.ie | Web: www.buffalo-technology.com.

Initial Setup.....	4
Install Software.....	8
Accessing LinkStation Data from a PC.....	12
Accessing LinkStation Data from a Mac	13
LinkStation Layout	17
Advanced Settings	19
Network Settings.....	23
Domain and AD Settings	24
Disk Management	25
Shared Folders.....	29
Groups	33
Users	34
Troubleshooting Multiple Shares.....	36
Backups	38
Maintenance Settings.....	42
System Status	47
Client Utility	51
Troubleshooting.....	53
Technical Specifications	54
Technical Support (USA)	55
Technical Support (Europe)	56

Begin by plugging your *power cable* and *Ethernet cable* into the back of the LinkStation as shown.




Connect your Cables



Plug the *power cord* into a 120 volt wall socket or surge protector.

Plug the other end of the *Ethernet cable* into a hub, router, or switch in your network.

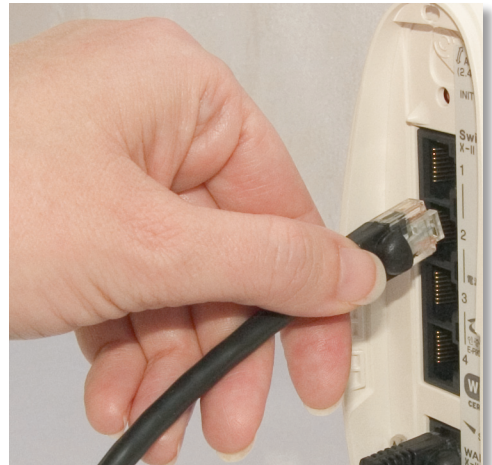



Press the *power button* on the front panel. LEDs will blink as your LinkStation boots up.

After your LinkStation has completed booting up, check the *LINK/ACT LED* on the front of the LinkStation. If it's lit, then your LinkStation is connected properly, and you can go on to page 8. If it's not lit, turn to page 7 for troubleshooting.

The LinkStation's Ethernet port will automatically adjust to use either a Crossover or Patch cable, so you may connect the LinkStation to your network with either type of Ethernet cable. Buffalo Technology doesn't recommend connecting the LinkStation directly to a PC.


Verify that the *LINK/ACT LED* on the front of LinkStation is lit (see page 6's picture). If it's lit, go to page 8 to continue setting up LinkStation. If the *LINK/ACT LED* is still not lit, try the suggestions below to verify that you're not suffering from common setup problems.

Having problems? Make sure that:

- the LinkStation and the router, hub or switch are both powered on,
- the Ethernet cable is securely plugged in at both ends, and
- the Ethernet cable is not damaged. Verify this by trying a different Ethernet cable.

If problems persist, you may contact Buffalo Technology's technical support. See pages 55 and 56 for technical support contact information.

Insert the LinkNavigator CD into your PC's CD-ROM drive. Setup should automatically launch. If it does not, manually launch *setup.exe* by pressing *Start* and selecting the *Run...* option. When the *Run* dialog opens, type **d:\setup.exe** (where d is the drive letter of your CD-ROM drive). Press *OK* to continue.

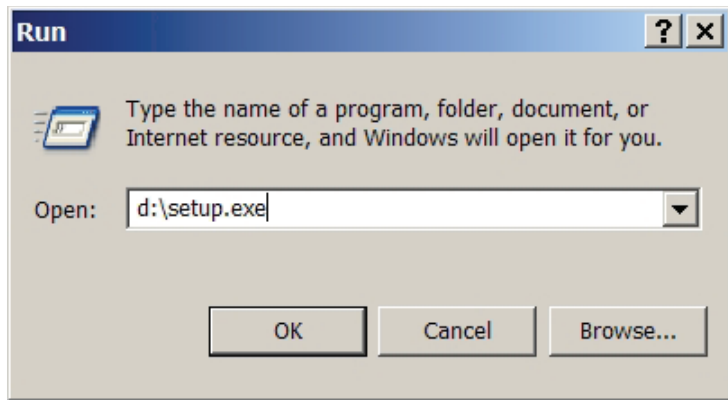





Press the *Begin Installation* button to begin.

Click on *Connect this PC to LinkStation* (the green, lower button).

Click *Next* to step through the installation.

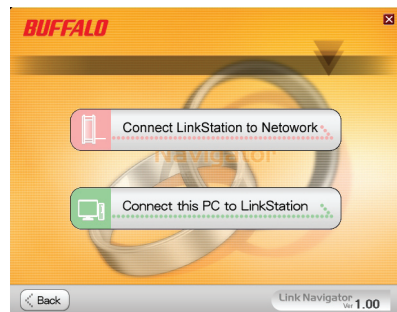

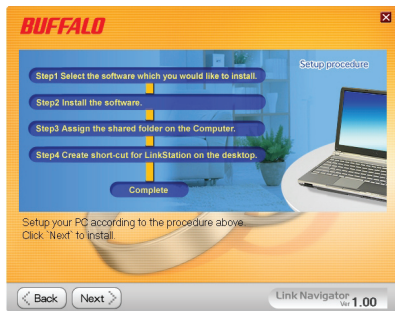


Continue pressing *Next* to step through the installation.


When installation is complete, you may close the installation window.




LinkNavigator Setup is Complete!

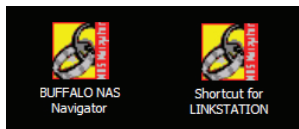

Two new icons will be on your desktop: *Shortcut for LinkStation* and *Buffalo NAS Navigator*.

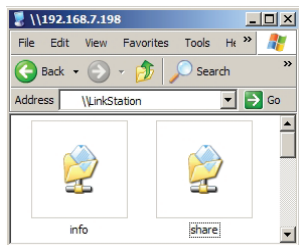

Clicking *Shortcut for LinkStation* takes you directly to the folders on your LinkStation. *Share* is the main folder that you can put files and folders in. *Info* contains a copy of your user manual.

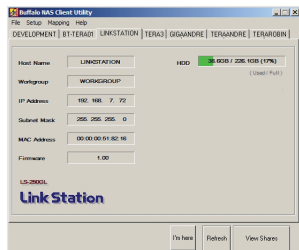



The *Buffalo NAS Navigator* icon opens the LinkStation's client utility. Turn to page 51 for more on using the NAS Navigator client utility.

Accessing LinkStation Data from your PC

Congratulations! You've completed basic setup. For more LinkStation configuration options, turn to *Advanced Settings*, beginning on page 19.



To Access LinkStation Data from a PC:

Your LinkStation uses “shares” (folders) to hold data. A share called “share” is already configured on your LinkStation, and you can create additional shares on page 29. To start using your LinkStation, you can either click on the *Shortcut for LinkStation* on your desktop, or you may just use *drive L* in My Computer, which setup has mapped to the default share in your TeraStation.

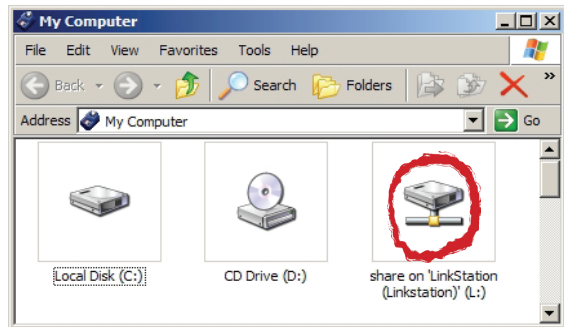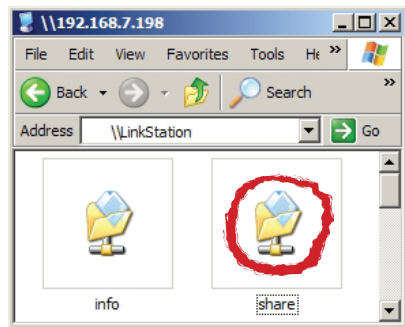

Accessing LinkStation Data from a Mac

If your Mac does not automatically detect your LinkStation's Share folder and put it on your desktop, you will need to add the LinkStation to the Mac's server list. Begin by clicking *Go*, and then choose *Connect to Server*.

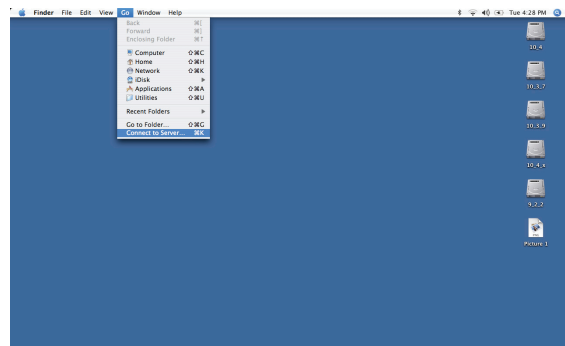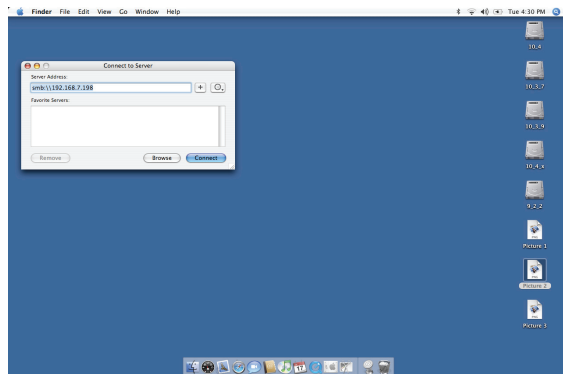


In the *Server Address* field, enter your LinkStation's IP address in the form *smb:\\ipaddress* (where "ipaddress" is your LinkStation's IP address), and click *Connect*.


If you don't know your LinkStation's IP address, see page 15.

Accessing LinkStation Data from a Mac


Select *Guest* and click on *Connect*. Note: If you have configured share permissions on your LinkStation, select *Registered User* and enter your Registered User credentials.

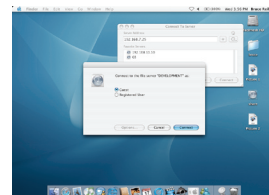

Select the volume that you want to mount, such as *share* or *share-mac*, from the list of folders on the LinkStation.

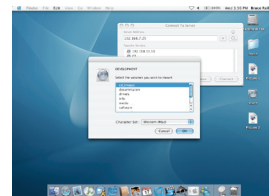


The share will open. A link to the shared folder will appear on your desktop.

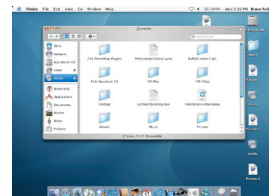


Accessing LinkStation Data from a Mac

If you don't know your LinkStation's IP address, there are several ways to get it.

One simple method is to use the Buffalo NAS Client Utility (included on your CD) to find your LinkStation(s). Just click on the tab for your LinkStation and you'll be able to read its IP address. You must have a Windows PC running on the network to use the Buffalo NAS client. See page 51 for more on the LinkStation client utility.

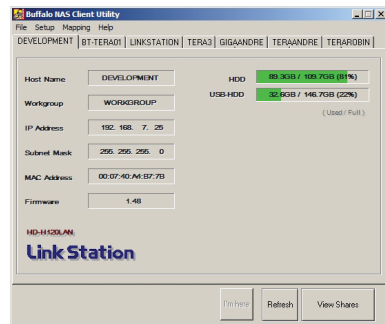

You can always get the LinkStation's IP address from your router's configuration utility. Many Buffalo routers list this information on the *Client Monitor* page, as shown to the right. Consult your router's documentation for instructions on identifying the LinkStation's IP address.

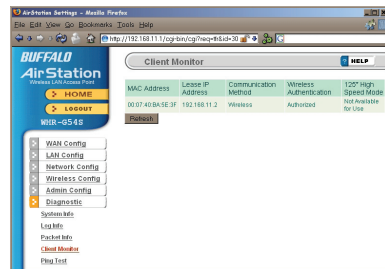

LinkStation Pro has two USB 2.0 ports on the rear. These ports can be used for adding external USB Hard Drives. LinkStation will share connected USB storage devices, allowing everyone on the network to use them. Up to two external USB hard drives may be added to LinkStation Pro. To connect a USB hard drive to your LinkStation, simply plug it into one of the USB ports.

Once your USB hard drive is connected, see page 26 for configuring your LinkStation to use it. See page 29 for information on setting up shared folders on a USB Hard Drive. Page 28 will show you how to reformat the USB Hard Drive. Page 38 and 39 show you how to set up LinkStation to backup to a USB Hard Drive.

Power Button – Press and release the Power Button to turn the LinkStation on. Hold it down for three seconds to turn the LinkStation off.

Link/Act LED – The Link/Act LED glows green when the LinkStation is connected to a network. It blinks when the LinkStation is sending or receiving data.

Info LED – The Info LED blinks when you have a message waiting for you in the client utility.

Diag LED – The Diagnostic LED blinks to signal abnormal operation. See page 53 for a list of Diagnostic LED codes.




Init button – The red Init button allows you to return your LinkStation to factory defaults.

10/100/1000 Mbps Ethernet Port – Use this port to connect your LinkStation to a switch, a router, or another computer. The port is autosensing, so either a conventional Ethernet cable or a crossover Ethernet cable may be used.


USB Ports – LinkStation offers two USB 2.0/1.1 ports for adding external drives. Please see the *LinkStation Expansion* section on page 16 to learn more about using LinkStation's USB Ports.



The Advanced Configuration GUI

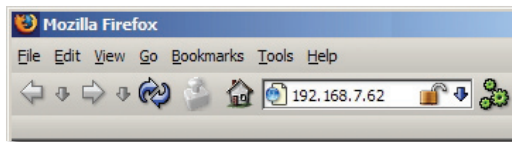


The Advanced Configuration GUI may be accessed at any time by typing the IP address of your LinkStation into the URL bar of a browser running on a computer connected to the same network as the LinkStation. This works perfectly with OS X, Linux, and other non-Windows PCs.

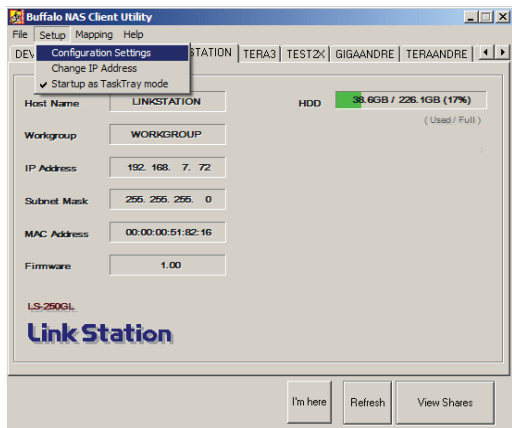

If you have a PC running the Buffalo NAS Client Utility, you can get to the Advanced Configuration GUI by clicking on *Setup* and choosing *Configuration Settings*.

This login prompt will appear. Enter **admin** for the user name. Until you change it, the password for the admin account will be **password**. Press the **OK** button when finished.

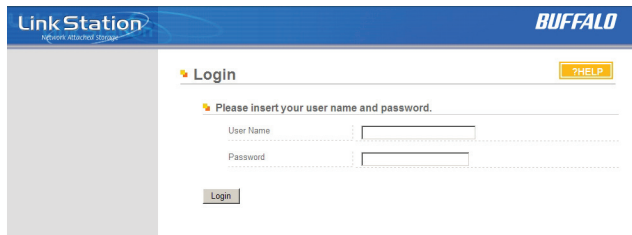The screenshot shows the LinkStation login page. At the top, there is a blue header bar with the 'LinkStation' logo on the left and the 'BUFFALO' logo on the right. Below the header, the page has a light gray background. On the left side, there is a vertical gray bar. The main content area is white and contains a 'Login' section. The 'Login' section has a title 'Login' with a small star icon to its left and a yellow 'HELP' button to its right. Below the title, there is a message: 'Please insert your user name and password.' followed by two input fields. The first field is labeled 'User Name' and the second is labeled 'Password'. Both fields are empty. Below the input fields, there is a 'Login' button.

User name: *admin*

Password: *password*


See page 35 to change your password.

If this login prompt does not appear, your DHCP server may not be functioning correctly. If DHCP is disabled, you may re-enable it, or verify that the LinkStation's IP Address is in the same range as that of your PC.

NOTE: Page 23 shows how to enable or disable DHCP, or configure the LinkStation with a Static IP Address.

Welcome to *Advanced Settings*! Bookmark this page in your browser so it can be easily accessed for future configuration changes. If the LinkStation's IP Address changes, you will need to recreate the link. You can also get here by typing *http://LinkStation_Name* into a Web browser, where LinkStation_Name is the name of your LinkStation (page 22).

You are now at *Home*. Notice that the *Home* button is lit up in yellow. You can navigate this menu by clicking on the buttons at the left of the screen. Here at "Home", you can see basic information about your LinkStation's current configuration. You may close this screen by clicking *Logout* at the bottom left, or just by closing the browser window. If you have lost your LinkStation, clicking *I'm here!* at the bottom left will cause it to beep, making it easier to find.

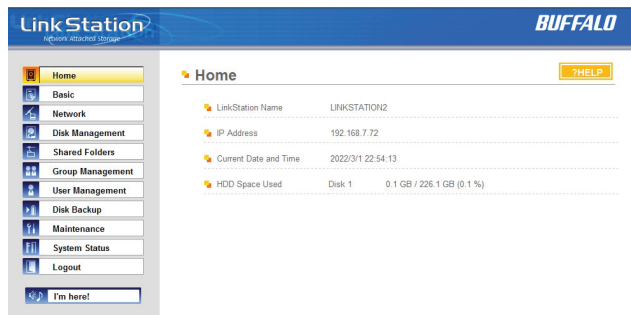

Basic

You may modify your LinkStation's hostname and description under *Hostname Setup*. A friendly, easy-to-remember name (e.g. "LinkStation") is recommended.


Make sure that the date and time are correct in *Date and Time Setup*. To synchronize time settings with those in your computer, press *Use Local Time*. To have your system time automatically set by an NTP server, enable *NTP Server* and enter an IP Address for the NTP server (e.g. 192.43.244.18) or use the supplied default NTP server.

Ensure that both the *Display Language* and the *Windows Client Language* are set to languages that you're comfortable with.

Once desired fields have been completed, press the *Apply* button.

The screenshot shows the 'Basic' settings page of a Link Station. On the left is a navigation menu with icons and labels: Home, Basic (selected), Network, Disk Management, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status, and Logout. The main content area is titled 'Basic' and includes a 'HELP' button. It contains three sections: 'Hostname Setup' with fields for 'LinkStation Hostname' (set to 'LINKSTATION2') and 'LinkStation Description' (set to 'LinkStation'); 'Date and Time Setup' with fields for 'Date' (2022 Year, 2 Month, 1 Day), 'Time' (22 Hours, 55 Mins, 28 Secs), a 'Use Local Time' button, and a 'Time Zone' dropdown (set to 'GMT-06:00'); and 'NTP Settings' with 'NTP Server' (radio buttons for 'Enable' and 'Disable', with 'Disable' selected), an 'NTP Server Address' field, a checkbox for 'Use default NTP server (ntp.ptt.mfeed.ad.jp)', and an 'NTP Synchronization Frequency' dropdown (set to 'Once a day'). Below these is the 'Text Display Settings' section with a 'Display Language' dropdown (set to 'English (English 英語)') and a 'Windows Client Language' dropdown (set to 'CP437 (United States, Canada)'). An 'Apply' button is at the bottom left of the settings area.

Network (IP Address Properties)

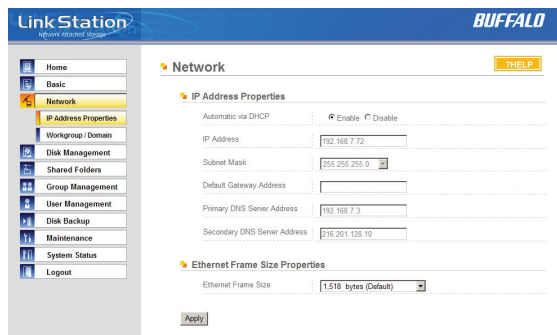


The screenshot shows the LinkStation web interface. On the left is a navigation menu with options: Home, Basic, Network (selected), IP Address Properties (selected), Workgroup / Domain, Disk Management, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status, and Logout. The main content area is titled 'Network' and contains two sections: 'IP Address Properties' and 'Ethernet Frame Size Properties'. In the 'IP Address Properties' section, 'Automatic via DHCP' is selected with 'Enable' radio button. The IP Address is 192.168.7.72, Subnet Mask is 255.255.255.0, Default Gateway Address is empty, Primary DNS Server Address is 192.168.7.3, and Secondary DNS Server Address is 216.201.128.10. The 'Ethernet Frame Size Properties' section shows 'Ethernet Frame Size' set to '1518 bytes (Default)'. An 'Apply' button is at the bottom left of the main content area.

In most networks, LinkStation will get its IP Address automatically from a DHCP server. You may disable DHCP here. If DHCP is disabled and an IP Address is not set manually, it will default to *192.168.11.150*. The LinkStation's *IP Address*, *Subnet Mask*, *Default Gateway Address*, and *DNS Server address* may all be entered manually under *IP Address Properties*.

Ethernet Frame Size may also be set manually on this page. Only use JumboFrame settings when operating in a Gigabit environment where all other clients support the same JumboFrame setting.

Click *Apply* after making any changes.

Network (Workgroup/Domain)

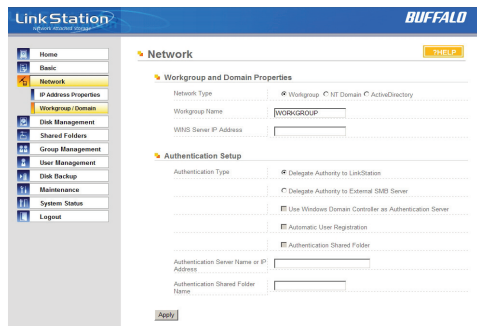

If you are unfamiliar with Domain/Active Directory networking, then please leave the *Network Type* and *Workgroup Name* set to *Workgroup*.


To make your LinkStation a member of a workgroup or domain, enter the appropriate information into the fields on this page and click *Apply*. Only select *NT Domain* if you have a Windows NT Server Domain Controller on your network. Only select *Active Directory* if you have an Active Directory server on your network.

NOTE: If using *NT Domain*, the LinkStation must be added as a member computer in the Domain Server.

NT Domain & Active Directory Authentication integrate the LinkStation Pro with Windows NT Domain and Active Directory Servers. The LinkStation Pro participates as a member device in the NT Domain and Active Directory networks, allowing the LinkStation to use Users and Groups that reside on the Domain or Active Directory System. If Active Directory is used, then the LinkStation will automatically receive update information from the domain controller(s). To configure the LinkStation Pro on an Active Directory network, you must have the Domain Administrator login credentials. To configure LinkStation Pro in a Windows NT Domain or Active Directory environment, select the appropriate Network Type and enter the Domain Name and Domain Controller into the appropriate fields. In an Active Directory environment, fill out the remaining fields. The Authentication Setup fields will be automatically filled out, so no input is needed there. Once you have finished, press *Apply*.

Disk Management (Drive Properties)

This page shows the properties for the main drive in your LinkStation Pro. If you have any USB hard drives plugged into the linkstation, their properties will appear here as well.

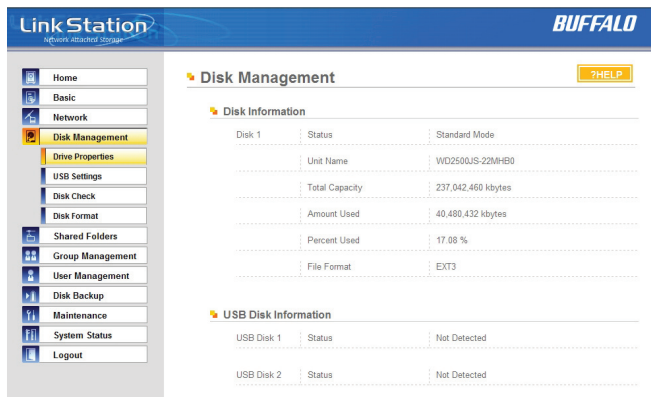

The screenshot displays the 'Disk Management' page of a LinkStation Pro. The left sidebar contains a navigation menu with options: Home, Basic, Network, Disk Management (selected), Drive Properties, USB Settings, Disk Check, Disk Format, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status, and Logout. The main content area is titled 'Disk Management' and includes a 'HELP' button. It is divided into two sections: 'Disk Information' and 'USB Disk Information'.


Disk Information

Disk 1	Status	Standard Mode
	Unit Name	WD2500JS-22MHB0
	Total Capacity	237,042,460 kbytes
	Amount Used	40,480,432 kbytes
	Percent Used	17.08 %
	File Format	EXT3

USB Disk Information


USB Disk 1	Status	Not Detected
USB Disk 2	Status	Not Detected

Disk Management (USB hard drives)

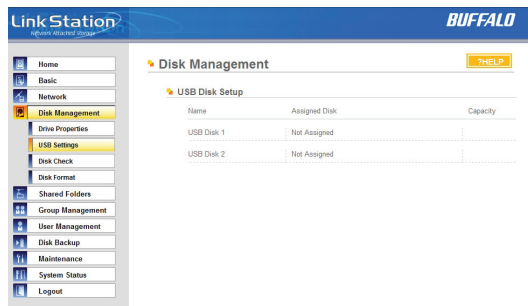


From here you can see your USB hard drives' setup information. If the hard drives' information isn't displayed properly, try restarting your USB hard drives and then restarting your LinkStation. Some USB hard drives must be reformatted from within LinkStation before they can be assigned shares. Select *Disk Format* from the left-side menu to format your USB hard disk(s).

Disk Management (Disk Check)

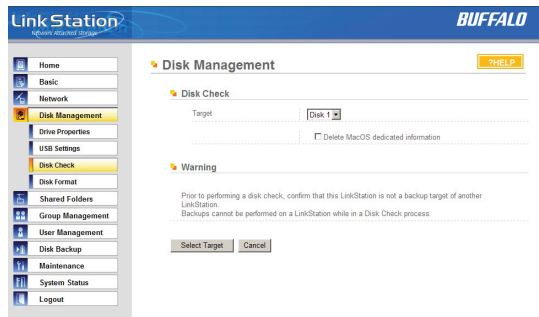

Disk check checks any of your hard drives for errors. To use disk check, select the disk that you want to check from the target pulldown and click *Select Target*.


Disk Management (Disk Format)

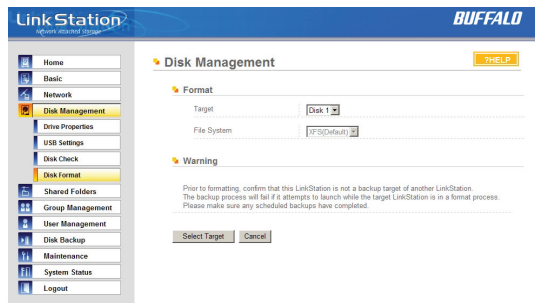

To format a hard drive or array, select it from the *Target Disk* drop box. Choose the file system desired from the *File System* dropbox (internal drives can only be formatted with XFS). Note that FAT32 has a 2 gigabyte single file size limit. If you choose FAT32 for your file system, you will not be able to store single files larger than 2 gigabytes on the drive. Use of the *XFS* or *EXT3* file systems is recommended. Press *Select Target Disk* when done.

Depending on the size of the target hard disk or array, a Disk Format may take several hours to complete. Performance will be slow during the disk format.


Shared Folders

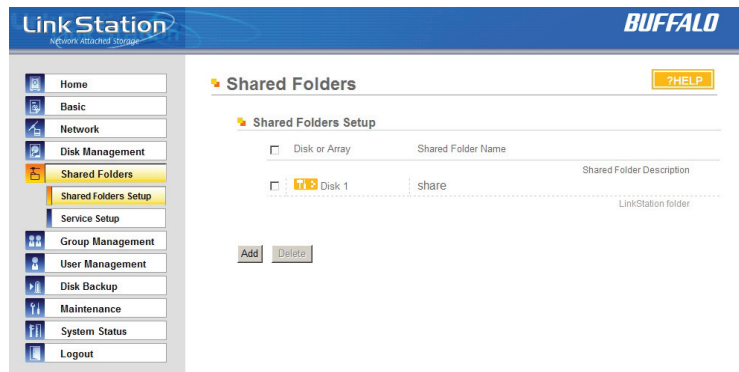

To begin setting up shares on your LinkStation, select *Shared Folders* from the left side menu, and then click the *Add* button under *Shared Folders Setup*.

To delete a share or shares, check the checkbox next to the shares you'd like to delete, and press the *Delete* button. Deleting shares will remove the share and erase all of the files and folders inside that share.

Adding a new Shared Folder

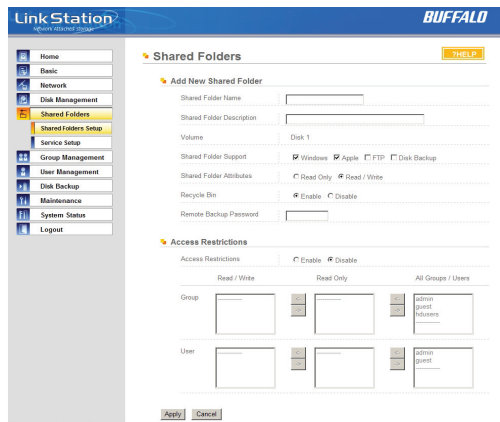


To add a new shared folder, enter a name for it in the *Shared Folder Name* box and choose which *Disk Space* it will reside in. You may also choose which operating systems and features the share will support by putting the appropriate checks next to *Shared Folder Support*, and whether the share supports the Recycle Bin by putting a selecting *Enable* or *Disable*. Enter a *Shared Folder Description* and a *Remote Backup Password* if desired. Click *Apply* to build the new shared folder.

Appletalk support is available for use with legacy Macs. Checking “Apple” by *Shared Folder Support* turns on AppleTalk, letting you use your LinkStation with older Macs. Note that Appletalk files are limited to 2GB maximum filesize and 32 characters for filenames. If a folder with AppleTalk

on is accessed from a modern OS that supports smb shares, these limitations will not apply.

Remote Backup Password will set a password on this share for other LinkStations who want to use it as a remote backup target. This password will not affect users attempting to access the share; it only pertains to remote LinkStations trying to access this share for backup tasks.

Shared Folders (Access restrictions)

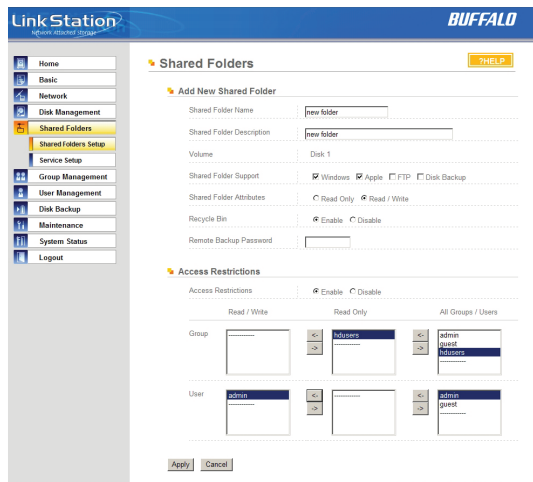


To use *Access Restrictions* for a share, select *Enable*.

Highlight groups or users in the *All Groups/Users* column and use the left-pointing arrow buttons (located just to the left of each box) to move individual groups or users from the *All Groups/Users* column to the *Read Only* box (if you want to give them read access only) or all the way to the *Writable* box, if you want to give them full access to the share. Right-pointing arrows will move highlighted users or groups back to the right.

Click *Apply* when you have your groups and users in the appropriate boxes.

To set up new groups and users, see pages 33 and 34.

Shared Folders (Service Setup)

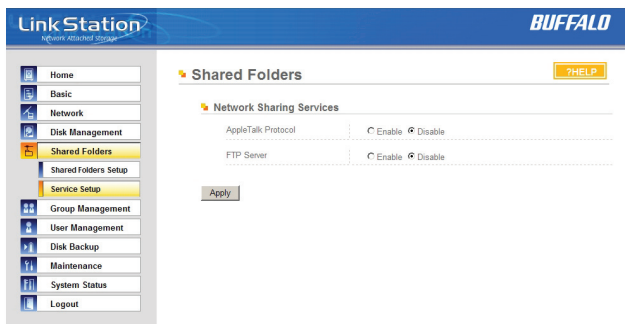


To allow FTP Access to LinkStation, choose *Enable* for *FTP Server*. To enable legacy AppleTalk support, choose *Enable* for *AppleTalk Protocol*.

FTP Server Info: Enabling the FTP Server will allow users to connect to shares via FTP protocol. Their username and password is used for their login credentials, and they will only have access to shares that have read-only or writeable access to on the LinkStation. The network administrator of your network may need to enable traffic on port 21 to the LinkStation for FTP to work over the Internet.

Click the *Apply* button to set up these services.

Group Management

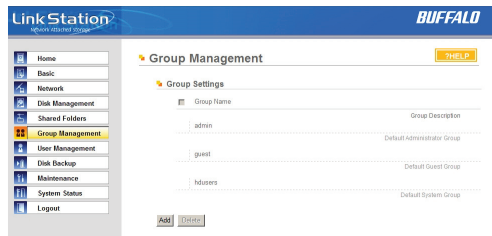


Groups allow for easier management of permissions in some networks, specifically networks with a lot of users in different departments.

To *Delete* a group, put a check next to its name and click *Delete*. To add a group to your LinkStation, click *Add*.


Add a name and a description to the *Add New Group* fields. Put checks next to each *Member User* that you want to be part of the group. Click *Apply* when your group is set up the way you want it.

Active Directory and Domain Groups are not shown here but are available under Share Management.

Members can be added or removed from a group at any time by editing the group. This is done by clicking on the Group name on the main Group Settings page.

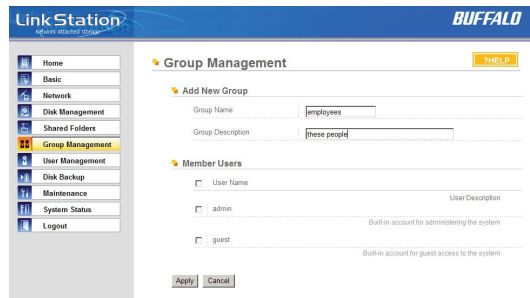


User Management

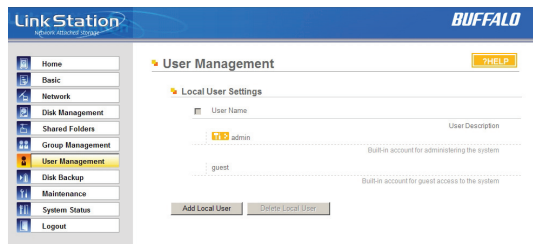


LinkStation is preconfigured with two users, *admin* and *guest*, out of the box. The *admin* and *guest* user accounts cannot be deleted. To delete any other user, put a check next to their name and click *Delete*. To add a new user, click *Add*.

The *Add New User* dialog will appear. Enter a *User Name*, *Password*, and *User Description* for the new user and click the *Apply* button. If a user will be accessing the LinkStation from a Windows 95/98 computer, their password should be 15 characters or less. Mac OS 8 and OS 9 users's passwords should be 9 characters or less.

A Domain User List will be displayed if the LinkStation Pro is a member of a Domain or Active Directory environment.

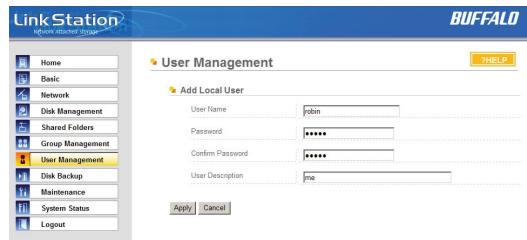


User Management (changing passwords)

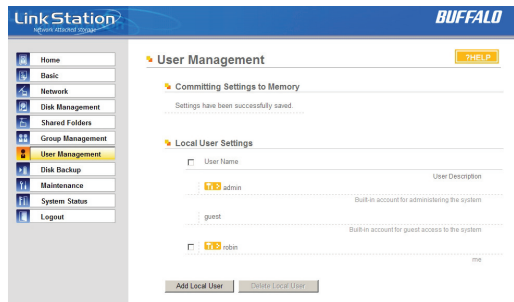

To change an account's password, click on the name of the account under *User Settings*. Note: if a user name and password are used to log into a user's windows computer or domain, the same user name and password should be used when creating the user's account on the LinkStation, or problems accessing shared folders may occur.

Enter the desired new password in both boxes and click *Apply*.

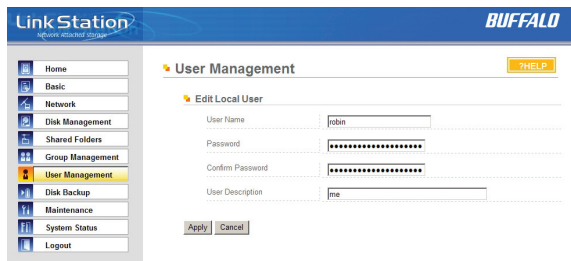

Accessing Multiple Shares from a single PC




When accessing multiple shares to a Windows PC, you may see this error message.


This is caused by having multiple shares to the same resource using different login credentials.

The error occurs when connecting to at least one secure, restricted share. Due to a constraint in Microsoft Windows, only one set of login credentials can access or map drive letters for a network resource such as the LinkStation. As such, only one username and password can be used while mapping drives to a PC. If unsecure, unrestricted shares are mapped and then an attempt to map a secure, restricted share is made from the same PC, this error will occur. To prevent this, you must create all mapped shares using the same login and password information. Please follow the steps on the next page to remedy this problem.

Mapping Multiple Shares

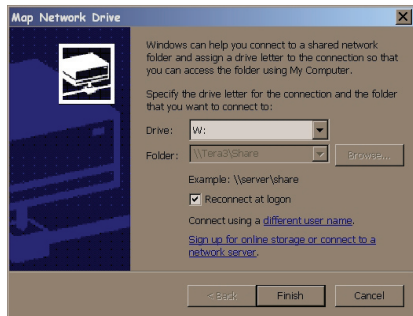


When mapping any share, select the *Connect using a different user name* option. A login and password prompt will appear. Use the username and password required by any secure, restricted shares for *all* shares. All mapped shares on a single PC must use the same username and password!

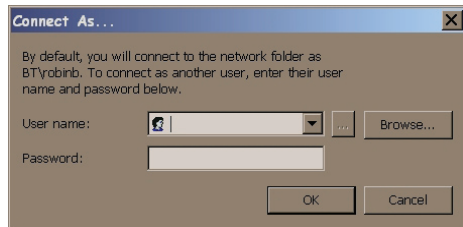

If only unrestricted shares are being mapped, then it's not necessary to set a username and password for shares. Multiple mapped drives to unrestricted shares can exist without a username or password as long as no restricted, secure shares are mapped. If an unrestricted share and a restricted share are both being mapped or accessed, use the restricted username and password for the unrestricted share login by using the *Connect using a different user name* option. This will allow a Windows PC to access both shares without any problems.

Disk Backup

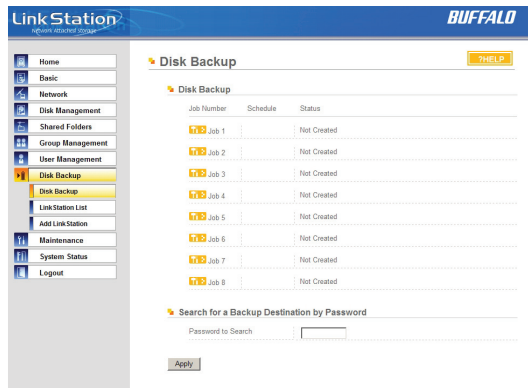

To create a backup job, click on a *Job Number*. The *Edit Backup Job* dialog will appear.

Disk Backup (Edit Backup Job)

Edit Backup Job

Job Number	Job 1
Backup Job Schedule	☒ Not Scheduled ☐ Immediately ☐ Every day ☐ Every week
Backup Date	Sunday
Backup Time	0 Hour 00 Minute
Encrypted Transfer	☒ Enable ☐ Disable
Compressed Transfer	☒ Enable ☐ Disable
Overwrite Backup	☒ Enable ☐ Disable
	☐ Differential Backups
Apply Cancel Clear Job	

Backup Source and Destination Folders


☐ Local Backup Shared Folder	☐ Destination Backup Shared Folder
Choose a source and destination folder for backup and click Select	
media	No Available Destination Backup Fold
Select	Remove

A *Backup Job* can run regularly on a daily or weekly schedule, or immediately by appropriate choices in the *Backup Job Schedule* field. *Date* and *Time* for the backup may be entered, and *Encryption* and *Compression* enabled or disabled. Enable *Overwrite Backup* to have each scheduled backup write over the previous backup, or *Differential Backups* to backup only files changed since the previous backup.

Select the folder to be backed up from the *Local Backup Shared Folder* dropdown, and the destination for the backup files from the *Destination Backup Shared Folder* dropdown. The destination folder may be on a USB drive attached to the LinkStation, or another LinkStation on the network. Click on *Select* to approve the backup targets.

Click the *Apply* button when your backup job is set up the way you want it, or *Clear Job* to stop a job from running again.


Disk Backup (LinkStation List)

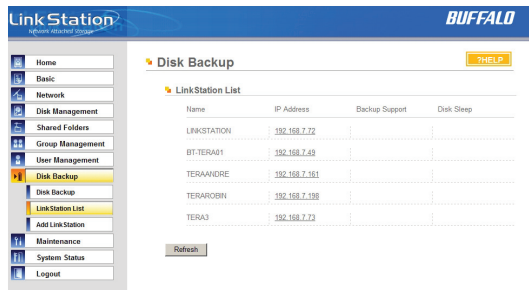

The LinkStation list shows other LinkStations in your network that you can configure network backups to.

Press *Refresh* to get a list of LinkStations on your network.

Disk Backup (Add LinkStation)

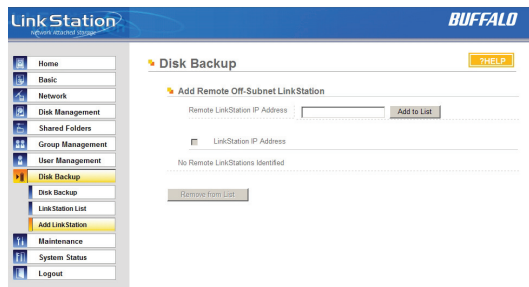

To add a remote LinkStation to your network, enter its numerical IP Address in the *Remote LinkStation IP Address* field and click the *Add to List* button. For remote LinkStation backups, make sure both firewalls are configured to allow traffic in and out of their networks.

Note: Disk Backups between two LinkStations use port 8873 for encrypted backups and port 873 for backups with no encryption.

Maintenance (Notification)

Link Station network attached storage **BUFFALO**

Maintenance HELP

Mail Notification

Mail Notification ☐ Enable ☐ Disable

SMTP Server Address

Subject Default

Recipient Mail Address 1

Recipient Mail Address 2

Recipient Mail Address 3

Recipient Mail Address 4

Recipient Mail Address 5

Notification Trigger ☒ HDD Status Report ☐ Disk Fail ☐ Fan Fail ☐ Complete Backup


HDD Status Sending Time clock

Apply Send Test Message

If your LinkStation is remotely managed, you may choose to receive nightly status reports and be notified of any disk events by email. To set this up, enable *Mail Notification* and enter the IP Address of your SMTP server* in the *SMTP Server Address* field. Select a *Subject* line for the emails (i.e. “LinkStation Status Report”) and enter the email address of each person you want to receive notification emails into a *Recipient Mail Address* field.


* SMTP server must be an *open* type server. Currently, there’s no provision for entering a username or password.

Maintenance (Alert Settings)

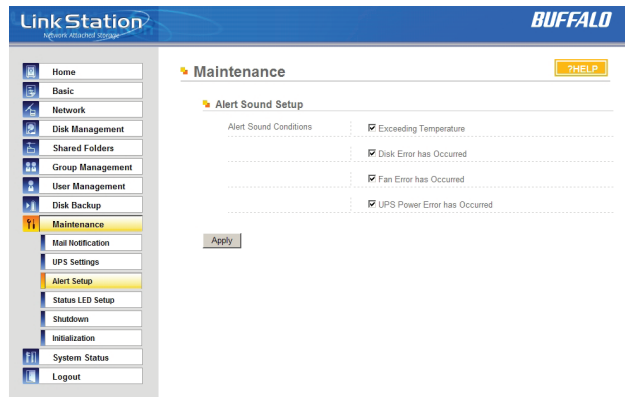


Alerts can be configured on the LinkStation to make audible noises when a problem is detected. Along with the audible noise, alert emails will be sent out if *Mail Notification* was properly configured. Please select the features you would like to receive an audible sound alert from and then press the *Apply* button.

Maintenance (Status LED Settings)

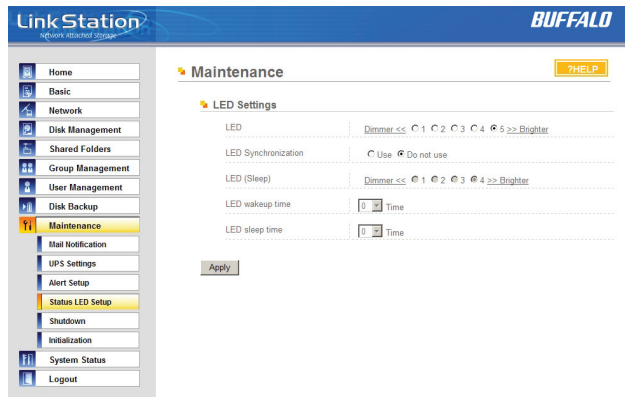

Adjust the brightness of the LEDs on your LinkStation's front panel here. Press *Apply* to update the settings.

Maintenance (Shutdown)

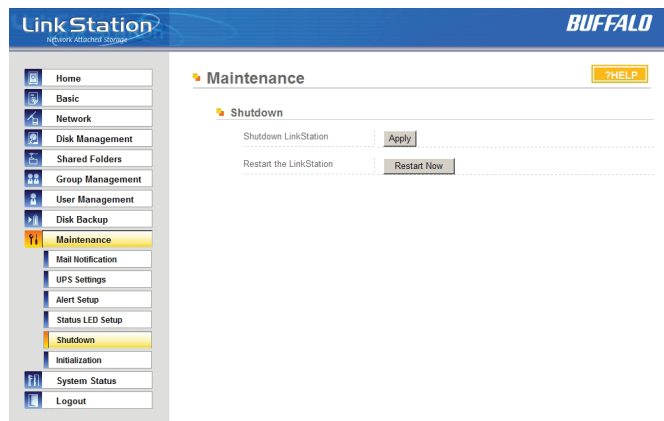


From the *Shutdown* page, press *Apply* to shutdown LinkStation. This has the same function as holding down the power button on the front of LinkStation, but may be done remotely. Turning on the LinkStation after a shutdown requires a physical button push on the front of LinkStation. The *Restart Now* button simply reboots the LinkStation, bringing it back to functionality after about 120 seconds.

Maintenance (Initialization)


Initialization is a reset procedure that restores all settings back to the default, out of box, configuration. All configuration, users, groups, and backup jobs are lost, but actual data and shares on the hard are NOT lost. If you want all data to be erased, reformat the drive.

Specify whether the LinkStation shall keep its administrator password after a initialization or whether the password should be reset to the default password (default password is *password*). Press the *Apply* button once you make the selection.

Press the *Restore* button to begin the initialization process; this will restore all settings to factory defaults but will NOT erase the data on the hard drives. *Start Disk Formatting* begins a complete disk format that will erase all information on the LinkStation's internal hard drives. This cannot be undone.

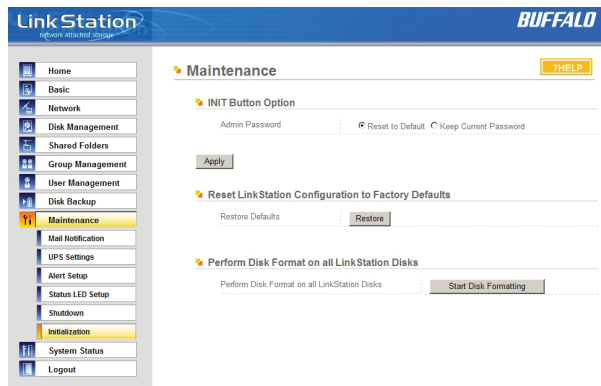

System Status (System Information)

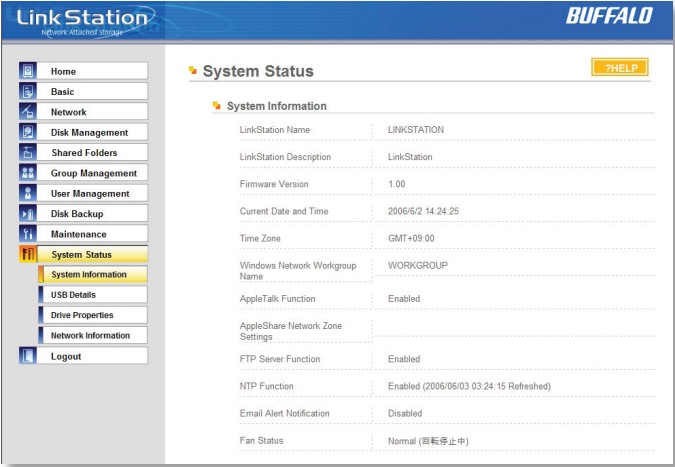


The screenshot displays the Buffalo LinkStation web interface. The left sidebar contains a navigation menu with options: Home, Basic, Network, Disk Management, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status (highlighted), System Information (highlighted), USB Details, Drive Properties, Network Information, and Logout. The main content area is titled 'System Status' and includes a 'HELP' button. Below this, the 'System Information' section lists various system parameters:

LinkStation Name	LINKSTATION
LinkStation Description	LinkStation
Firmware Version	1.00
Current Date and Time	2006/6/2 14:24:25
Time Zone	GMT+09:00
Windows Network Workgroup Name	WORKGROUP
AppleTalk Function	Enabled
AppleShare Network Zone Settings	
FTP Server Function	Enabled
NTP Function	Enabled (2006/06/03 03:24:15 Refreshed)
Email Alert Notification	Disabled
Fan Status	Normal (回転停止中)

This page shows you the System Information for your LinkStation.


Firmware updates are occasionally available from www.buffalotech.com for the LinkStation Pro. These must be executed from a Windows PC on the same network. Your router, switch, or hub should pass through ports 8873 and 22939 for this to work (most do).

System Status (USB Details)

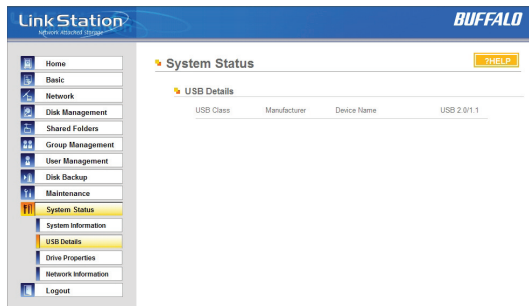

This page shows you details on USB hard drives and UPSs plugged into your LinkStation. In this example, no USB hard drives are plugged in to the LinkStation.

System Status (Drive Properties)

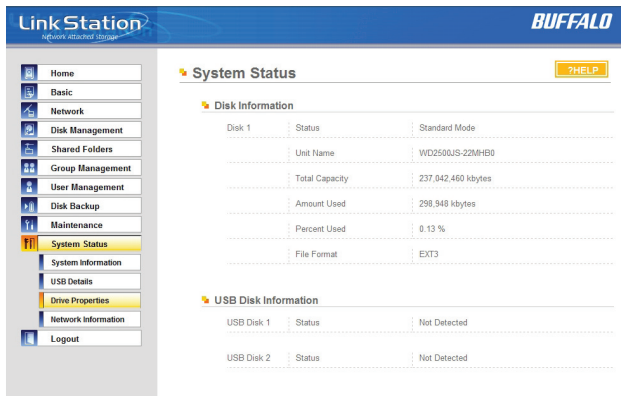


The screenshot shows the LinkStation web interface. The left sidebar contains a menu with options: Home, Basic, Network, Disk Management, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status (highlighted), System Information, USB Details, Drive Properties, Network Information, and Logout. The main content area is titled 'System Status' and includes a 'HELP' button. It displays two sections: 'Disk Information' and 'USB Disk Information'.

Disk Information		
Disk 1	Status	Standard Mode
	Unit Name	WD2500JS-22M-HB0
	Total Capacity	237,042,460 bytes
	Amount Used	298,948 bytes
	Percent Used	0.13 %
	File Format	EXT3

USB Disk Information		
USB Disk 1	Status	Not Detected
USB Disk 2	Status	Not Detected

This page shows you the properties of all hard drives in and attached to your LinkStation.


System Status (Network Information)

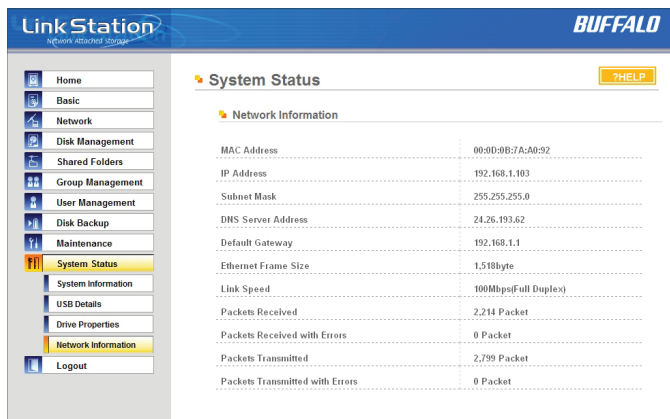

The screenshot shows the Link Station web interface. The left sidebar contains a menu with options: Home, Basic, Network, Disk Management, Shared Folders, Group Management, User Management, Disk Backup, Maintenance, System Status (highlighted), System Information, USB Details, Drive Properties, Network Information (highlighted), and Logout. The main content area is titled 'System Status' and includes a 'Network Information' section. A table displays various network parameters and their values.

System Status	
Network Information	
MAC Address	00:00:08:7A:A0:92
IP Address	192.168.1.103
Subnet Mask	255.255.255.0
DNS Server Address	24.26.193.62
Default Gateway	192.168.1.1
Ethernet Frame Size	1,518byte
Link Speed	100Mbps(Full Duplex)
Packets Received	2,214 Packet
Packets Received with Errors	0 Packet
Packets Transmitted	2,799 Packet
Packets Transmitted with Errors	0 Packet


This page shows you the System Information for your network connection.

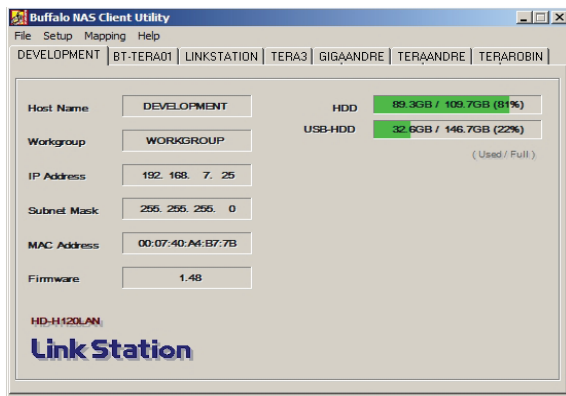

This is the *Buffalo NAS Client Utility*. Installed on your PC, it allows you to access each of the LinkStations (and TeraStations) on your network. Click *Refresh List* to get tabs for each of your LinkStations. Each tab shows the Host Name, Workgroup, IP Address, and Subnet Mask of the associated LinkStation, as well as the version of firmware it's running.

With a LinkStation's tab selected, you can click on the *View Shares* button to go directly to its root share. Clicking the *Setup* pulldown menu and selecting *Browser Management* takes you to the browser management tool that we began exploring on page 19. And clicking *Setup* and choosing *Modify IP Address* takes you to the following screen . . .

IP Address Setup

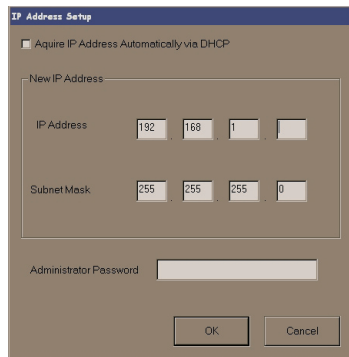

The image shows a screenshot of the 'IP Address Setup' dialog box. It has a title bar with the text 'IP Address Setup'. Inside the dialog, there is a checkbox labeled 'Acquire IP Address Automatically via DHCP' which is currently unchecked. Below this, there is a section titled 'New IP Address' which contains two rows of input fields. The first row is labeled 'IP Address' and contains four input boxes with the values '192', '168', '1', and an empty box. The second row is labeled 'Subnet Mask' and contains four input boxes with the values '255', '255', '255', and '0'. Below these input fields, there is a label 'Administrator Password' followed by a single-line text input field. At the bottom right of the dialog, there are two buttons: 'OK' and 'Cancel'.

Here, you may enter your *IP Address* and *Subnet Mask* manually, or enable your LinkStation to acquire them automatically from a DHCP server. You'll need the administrator password to use this screen. Press *OK* when you're done.

Disk Errors

If LinkStation encounters a disk error, it will be reported in the LinkStation status on the top of any of the Web-Based configuration screens. Run a *Disk Scan* in the event of this error. If that doesn't work, try a reformat. Reformatting the drive will delete all of the data on it so try to backup any data you can before beginning. Finally, if none of the above solutions help, then please contact Technical Support for further assistance.

LED Flash Codes:

- 3 flashes - Partition problem with hard drive. Reformat the hard drive.
- 4 flashes - Fan problem.
- 5 flashes - ROM problem.
- 6 flashes - Hard Drive can not be recognized.
- 7 flashes - Problem with motherboard (RAM, LAN, or Hard Drive controller).

LAN Standards:	IEEE 802.3u; IEEE 802.3ab; IEEE 802.3
Transmission Types:	1000BASE-T: 8B1Q4, PAM5; 100BASE-TX: 4B5B MLT-3; 10BASE-T Manchester Coding
Access Media:	CSMA/CD
Media Interface:	RJ-45
USB Standard:	USB 2.0 Hi-Speed (HS) Full-Speed (FS) Low-Speed (LS)
USB Connector:	USB A Connector (2)
Data Transmission Speed:	Max: 480 Mbps (HS Mode) Max: 12 Mbps (FS Mode)
Electric Current:	120V A/C
Power Consumption:	~21W (Varies slightly with size)
Dimensions:	2.4" x 6.3" x 8.5" (60 x 160 x 216 mm.)
Weight:	~3.5 lbs (x.x kg.) (Varies with size)
Operating Environment:	41° - 95° F; 20-80% non-condensing

Buffalo Technology offers toll-free technical support 24 hours a day, 7 days a week for this product. Customers in the United States and Canada can obtain technical support using the following information:

Web: www.buffalotech.com
E-mail: info@buffalotech.com
Telephone: (866)-752-6210 (USA & Canada only; see page 56 for European tech support)

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

GPL Statement

This product uses GPL/LGPL software. Please see the GNU LICENSE document on the LinkNavigator CD-ROM for more information concerning the terms of the license. To obtain a copy of our open source software, contact GPL@buffalotech.com.

Buffalo Technology (Europe), Inc.
176 Buckingham Avenue,
Slough, Berkshire, SL1 4RD
United Kingdom

GENERAL INQUIRIES

Email: sales@buffalo-technology.com

TECHNICAL SUPPORT

Technical Support in Europe is available between the hours of 9am-6pm (GMT) Monday to Thursday and 9am-4:30pm (GMT) Friday for this product. Customers in Europe can obtain Technical Support using the following information:

E-mail: helpdesk@buffalo-technology.ie | Web: www.buffalo-technology.com